ELECTRONIC MODULAR SWITCHING SYSTEM KX-T30810B

Installation and Operation Manual for Added and Changed Features

Please read this Manual first and then another Installation Manual for programming.

This manual is available for KX-T30810B which has the mark ③ on the plate as shown below.



Note:

- 1. Use the "STORE" key instead of "MEMORY" key, for KX-T7020, 7030, 7050 and 7130 do not have the "MEMORY" key.
- 2. Use the "AUTO ANSWER" key instead of "AUTO ANS" key, for KX-T7020, 7030, 7050 and 7130 do not have the "AUTO ANS" key.
- 3. For the Features of Flexible keys, refer to this manual.
- 4. Extension 11 should be connected to proprietary telephone with LCD for programming system data.
- 5. All the programming procedures described in the Installation Manual have been modified. Delete step 2 "Press the NEXT button" from every feature of the programming in another Installation Manual. For further detail, see page 3 of this manual. This manual describes the revised procedures from which step 2 has already been deleted.

System Component

	Model No.	Description
Service unit	KX-T30810B	Electronic Modular Switching System
	KX-T30820	EMSS Proprietary Telephone
	KX-T30830	EMSS Proprietary Telephone with LCD
	KX-T30850	EMSS Proprietary Telephone
Telephone	KX-T7020	EMSS Proprietary Telephone
•	KX-T7030	EMSS Proprietary Telephone with LCD
	KX-T7050	EMSS Proprietary Telephone
	KX-T7130	EMSS Proprietary Telephone with LCD
	KX-T30860	Doorphone Adaptor
O 45	KX-T30865	Doorphone
Optional	KX-T30890	Headset
equipment	KX-A16B	System Back-up Unit
	KX-A20	Cable Kit with Terminal


TABLE OF CONTENTS

	Example of Programming	3
Adde	ed Features	
	< Connection >	
	The Parallel Connection of the Proprietary Telephone and the Standard Telephone	6
	< Program >	
	Automatic Designated CO Line Access	7
	Programmable Call Waiting Tone	8
	Programmable Executive Override	9
ı	Standard Telephone Connection with Proprietary Telephone	10
	FI/SAVE Selection (for KX-T30850, KX-T7020, KX-T7030, KX-T7050) .	11
ı	Selectable Call-on Hold Music Source	12
	< Detailed Features >	
	Automatic Redial	13
	Flexible CO Button	13
	Flexible DSS Button (for KX-T30830)	15
	Flexible MESSAGE (Message Waiting) Button (for KX-T7020, KX-T7030, KX-T7050, KX-T7130)	16
	Auto CO Hunting	17
	Executive Override	18
	Electronic Station Lock	19
Chan	nged Features	
	< Program>	
	System Speed Calling Entry	21
(One Touch Dialing	21
	System Speed Calling—Class Assignment	22
	Toll Restriction—Class Assignment	23
	Toll Restriction—Denied Code Assignment	25
	Toll Restriction—Exceptional Code Assignment	26
	Hold Recall Time Set	27
	Transfer Recall Time	28
	seled Features	
4	Cancellation List	29
Prog	ramming Table	30

Example of Programming

All the programming procedures described in the Installation Manual have been modified. Delete step 2; "Press the NEXT button "from every feature of the programming in another Installation Manual. See the example below—the portion that should be deleted is shown shaded.

This manual describes the revised procedures from which step 2 has already been deleted, as "Revision" below.

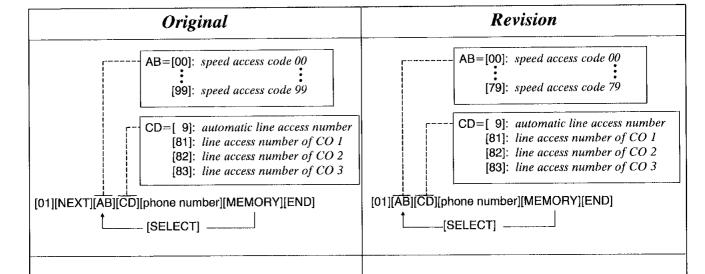

- 1. Dial (01) or press the AUTO button to go into the speed dialing entry mode.

 "SPEED DIALING" will be displayed.
- 2. Press the NEXT button.
 "ENTER SPEED CODE" will be displayed.
- 3. Dial (00 through 99) or press the NEXT button, for speed access code entry.
- 4. Enter the line access number.
- 5. Enter the phone number.
- **6.** Press the MEMORY button. The memory indicator will be lit.
- 7. To program desired speed access code, press the SELECT button and then dial the speed access code.

To advance to the next speed access code, press the NEXT button.

To return to the previous speed access code, press the PREV button.

- 8. Repeat steps 4 to 7.
- **9.** To exit from speed dialing entry, press the END button.

- 1. Dial (01) or press the AUTO button to go into the speed dialing entry mode. "ENTER SPEED CODE" will be displayed.
- 2. Dial (00 through 79) or press the NEXT button, for speed access code entry.
- 3. Enter the line access number.
- **4.** Enter the phone number.
- 5. Press the MEMORY button.
 The memory indicator will be lit.
- **6.** To program desired speed access code, press the SELECT button and then dial the speed access code.


To advance to the next speed access code, press the NEXT button.

To return to the previous speed access code, press the PREV button.


- 7. Repeat steps 3 to 6.
- 8. To exit from speed dialing entry, press the END button.

When the System Program Switch on the KX-T30810B is set to the PROGRAM position, the operation of the KX-T7030 and the KX-T7130 will change as follows.

KX-T7030

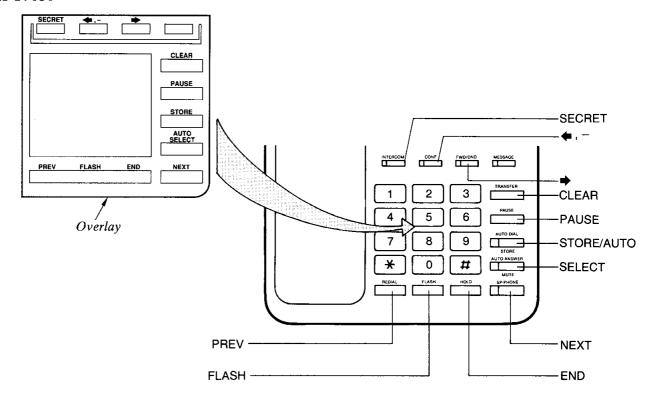

KX-T7130

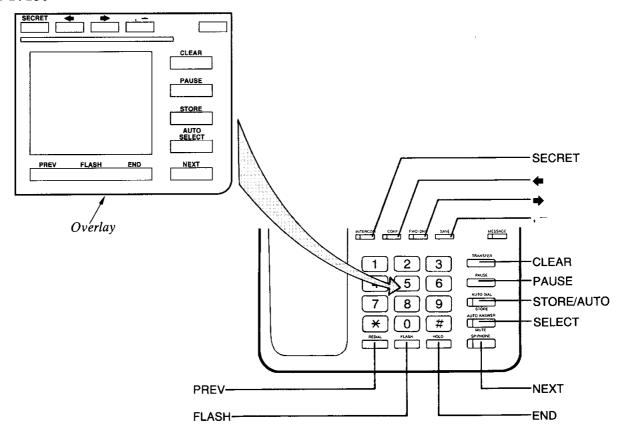

Added Features

The Parallel Connection of the Proprietary Telephone and the Standard Telephone

- Any extension can be connected in parallel with the proprietary telephone and the standard telephone.
- In the event of power failure, CO 1, CO 2 and CO 3 can be accessed using the standard telephones that are connected in parallel with proprietary telephones to extension numbers 11 through 13 respectively.
- If the extension receives a call, a ringing will be heard from the proprietary telephone and the standard telephone. You can answer the call by using either the proprietary telephone or the standard telephone.
- An answering machine, a facsimile, a MODEM (personal computer) etc. can be connected instead of the standard telephone.
- You can program the standard telephone not to work. For programming, refer to the "Standard Telephone Connection with Proprietary Telephone" on page 10 in this manual.

Note:


- The LCD on the proprietary telephone will show you the standard telephone is used.
- The following features will not work by the standard telephone connected in parallel with the proprietary telephone.

Call splitting


External feature access

Conference

- The standard telephone connected in parallel with the proprietary telephone will not make a call in the following cases;
 - —The proprietary telephone is set to BGM mode.
 - —The proprietary telphone is receiving the paging through the built-in-speaker.
 - —The proprietary telephone is set to PROGRAM-MING mode.
- The standard telephone connected in parallel with the proprietary telephone will not ring in the following cases;
 - —The proprieatry telephone is set to Automatic Answer-Intercom.
 - The proprietary telephone is set to Voice alerting mode.

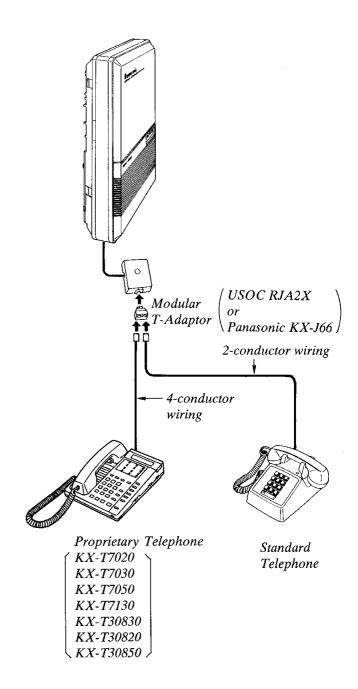

Automatic Designated CO Line Access

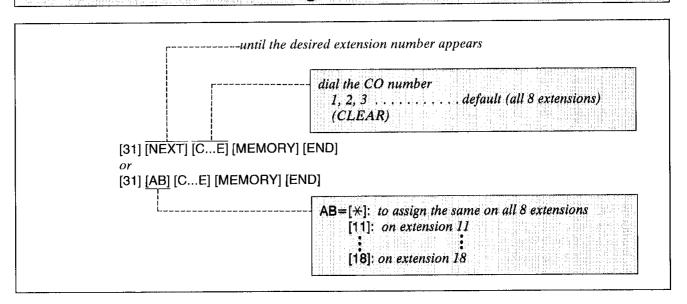

Description

Through programming, you can select which CO Line is accessed automatically when you dial 9 to use the "Automatic Line Access" feature or you use the "Auto CO Hunting" feature.

Programming

- 1. Dial (31).
 "ENTER EXT NO" will be displayed.
- 2. Press the NEXT button.
 "11:CO1, 2, 3" will be displayed and "1, 2, 3" will blink.
- 3. Dial the CO numbers to be entered.

 To cancel the entered CO Number, press the CLEAR button.
- **4.** Press the MEMORY button. The LCD will stop blinking.
- 5. Repeat steps 2 to 4, to program the assignment on the other extensions.
- **6.** To return to the initial program mode, press the END button.

Conditions


- •When you start the programming from step 1, you may dial the desired extension number instead of NEXT button at step 2.
- The PREV button allows you to go to the previous extension for displaying the CO assignment.

Operation

• The programmed CO line will be selected after dialing 9 automatically.


Programming Table

Programmable Call Waiting Tone

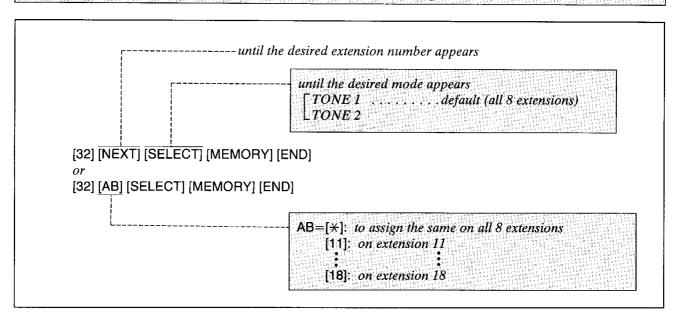

Description

Through programming, you can change the Call Waiting Tone from Tone 1 to Tone 2 shown below to prevent the user from missing the tone. Tone 1 is heard from the handset receiver of the standard telephone and the built-in speaker of the proprietary telephone. Tone 2 is heard only from the built-in speaker of the proprietary telephone when you have another call.

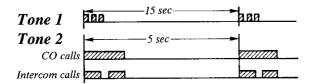

Programming

- 1. Dial (32).
 "ENTER EXT NO" will be displayed.
- 2. Press the NEXT button.
- 3. Press the SELECT button to alternate between "TONE 1" and "TONE 2" and select the desired tone.
- **4.** Press the MEMORY button. The LCD will stop blinking.


- **5.** Repeat steps 2 to 4, to program the assignment of the other extensions.
- **6.** To return to the initial program mode, press the END button.

Conditions

- As for the KX-T30850, Tone 2 is heard from the handset receiver while having a conversation.
- Call Waiting feature should be programmed "ENABLE" beforehand. Referto "Programmable Call Waiting" in Installation Manual.
- •When you start the programming from step 1, you may dial the desired extension number instead of the NEXT button at step 2.
- The PREV button allows you to go to the previous extension for displaying the Call Waiting mode.

Programming Table

Programmable Executive Override

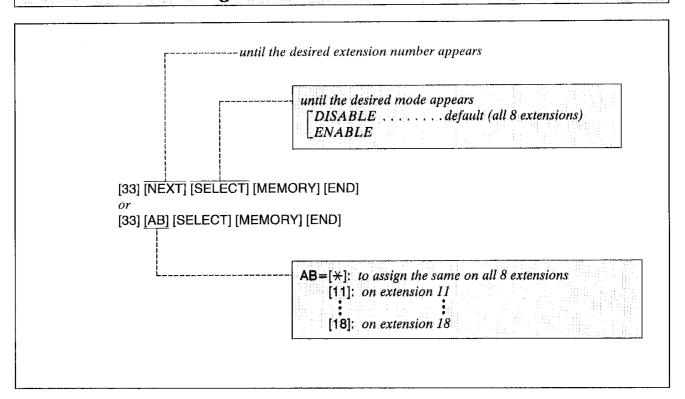

Description

Through programming, you can select which extension may barge in another extension that is in conversation with an outside party.

Programming


- 1. Dial (33). "ENTER EXTNO" will be displayed.
- 2. Press the NEXT button.
 "11: DISABLE" will be displayed and "DISABLE" will blink.
- 3. Press the SELECT button, to alternate between ENABLE and DISABLE and select the desired mode.
- 4. Press the MEMORY button. The LCD will stop blinking.
- 5. Repeat steps 2 to 4, to program the assignment of the other extensions.
- **6.** To return to the initial program mode, press the END button.

Conditions

- •If you start the programming from step 1, you may dial the desired extension number instead of NEXT button at step 2.
- The PREV button allows you to return to the previous extension for displaying the Executive Override selection.

Programming Table

Standard Telephone Connection with Proprietary Telephone

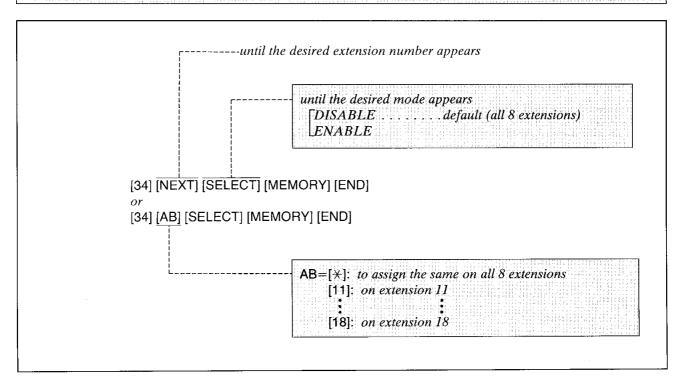

Description

You can select whether the standard telephone which is connected in parallel with the proprietary telephone works or not.

ENABLE.... The standard telephone works.

DISABLE.... The standard telephone does not work.

Programming

- 1. Dial (34).
 - "ENTER EXT NO" will be displayed.
- 2. Press the NEXT button until the desired extension number appears.
 - "11: DISABLE" will be displayed and "DISABLE" will blink.
- **3.** Press the SELECT button, to alternate between ENABLE and DISABLE and select the desired mode.
- **4.** Press the MEMORY button. The LCD will stop blinking.
- **5.** Repeat steps 2 to 4, to program the assignment of the other extensions.


6. To return to the initial programming mode, press the END button.

Conditions

- If you start the programming from step 1, you may dial the desired extension number instead of the NEXT button at step 2.
- The PREV button allows you to return to the previous extension.
- •When a call reaches to the KX-T30820, KX-T30830, KX-T30850, two types of ring tones sound. This is normal and we recommend you to select DISABLE by programming if you do not use the standard telephone.

Programming Table

F1/SAVE Selection (for KX-T30850, KX-T7020, KX-T7030, KX-T7050)

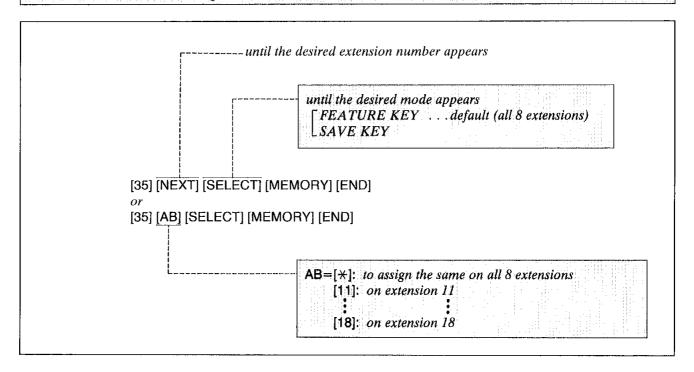

Description

The SAVE button is not provided with KX-T30850, KX-T7020, KX-T7030 and KX-T7050. T7030 and KX-T7050.

FI button can be changed from programmable feature button to SAVE button.

"FEATURE KEY" mode...

programmable feature function "SAVE KEY" mode...

SAVE function

Programming

- 1. Dial (35).
 "ENTER EXT NO" will be displayed.
- 2. Press the NEXT button.
 "11: FEATURE KEY" is displayed and the
 "FEATURE KEY" will blink.
- 3. Press the "SELECT" button to alternate between FEATURE KEY and SAVE KEY to select the desired mode.


- 4. Press the MEMORY button.
- 5. Repeat steps 2 to 4, to program SAVE button of the other extensions.
- **6.** To return to the initial programming mode, press the END button.

Conditions

- •You may dial the desired extension number which needs SAVE button instead of the NEXT button at step 2.
- The PREV button allows you to go the previous extension for displaying the FI/SAVE selection.

Programmable Table

Selectable Call-on-Hold Music Source

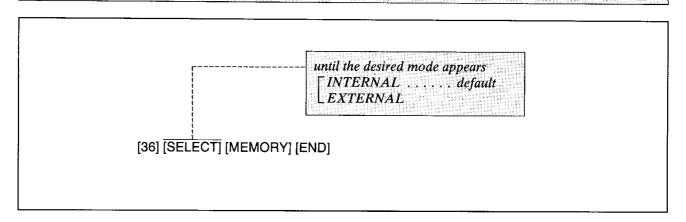

Description

The built-in music source is provided with your KX-T30810B.

While keeping an outside call on hold, the music will be transmitted from the internal music source or external music source.


It is also available for the source of the background music.

Programming

- 1. Dial (36).
 "INTERNAL" will be displayed and will blink.
- 2. Press the SELECT button to alternate between "INTERNAL" and "EXTERNAL" and select the music source.
- 3. Press the MEMORY button. The display will stop blinking.
- **4.** To return to the initial programming mode, press the END button.

Programming Table

Automatic Redial

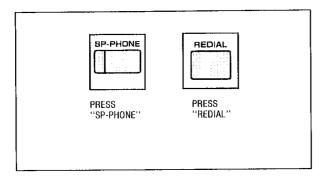

Description

The last phone number dialed on an outgoing call to CO line can be redialed up to 10 times. This feature is available for only KX-T7020, KX-T7030, KX-T7050 and KX-T7130.

Operation


- 1. Press the SP-PHONE button.
- 2. Press the REDIAL button.

You may press the CO button to select the CO line directly after pressing the SP-PHONE button.

Conditions

- To cancel automatic redialing, press the FLASH button.
- Pressing the REDIAL or SAVE button allows you to;
- Redial once when using the handset.
- Redial up to 10 times within 10 minutes when using the redial feature with the SP-PHONE button.

Flexible CO Button

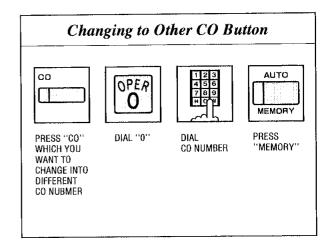

Description

Allows each CO button to change to the other CO number which is different from printed CO number.

Operation

- Be sure the handset is on the cradle and the SP-PHONE button is off.
- Set the MEMORY switch of the proprietary telephone to "PROGRAM".
- 1. Press the CO button which you want to change to a different CO number.
 When pressing CO 1 button, "CO 1" will be displayed.
- **2.** Dial (0). "CO" will be displayed.
- 3. Dial the new CO number (1 through 3). When dialing (2), "CO 2" will be displayed.
- 4. Press the MEMORY button.
- After programming, return the MEMORY switch to the "SET" position.


Conditions

If you program the same CO number as another CO button, the original one will be cleared.

• Initial assignment (default) for the flexible buttons is as follows:

CO1 button...CO1 CO7 button...DSS13
CO2 button...CO2 CO8 button...DSS14
CO3 button...CO3 CO9 button...DSS15
CO4 button...not stored CO10 button...DSS16
CO5 button...DSS11 CO11 button...DSS17
CO6 button...DSS12 CO12 button...DSS18

Flexible CO Button (cont.)

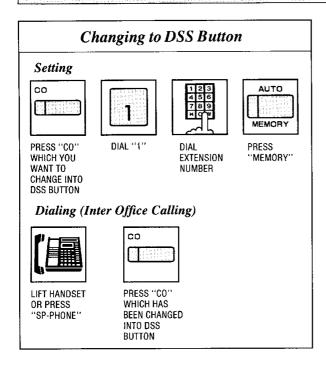

Description

Allows each CO button to change to a DSS (Direct Station Selection) button. DSS button can be used instead of dialing an extension number.

Operation

Setting

- Be sure the handset is on the cradle and the SP-PHONE button is off.
- Set the MEMORY switch of the proprietary telephoneto "PROGRAM".
- 1. Press the CO button which you want to change to a DSS button.

When pressing the CO 1, "CO 1" will be displayed.


- **2.** Dial (1). "EXT" will be displayed.
- 3. Dial the extension number (11 through 18). When dialing (11), "EXT 11" will be displayed.
- 4. Press the MEMORY button.
 - After programming, return the MEMORY switch to the "SET" position.

Dialing (Inter Office Calling)

- 1. Lift the handset or press the SP-PHONE but-
- 2. Press the CO button which has been changed to.

Condition

If you program the same extension number as another CO button, the original one will be cleared.

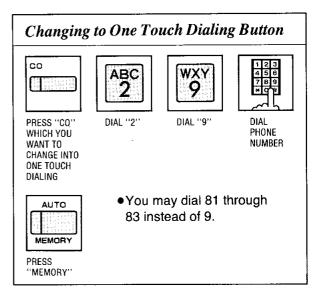


Description

Allows each CO button to be used as a one touch dialing memory location. Up to 16 digits can be stored in each CO button.

Operation

- Be sure the handset is on the cradle and the SP-PHONE button is off.
- •Set the MEMORY switch of the proprietary telephoneto" PROGRAM".
- 1. Press the CO button which you want to use as a one touch dialing memory location.
 When pressing CO 1 button, "CO 1" will be displayed.
- 2. Dial (2).
- 3. Dial (9).
 - •You may dial 81 through 83 instead of 9 to select the desired trunk.
- **4.** Dial the phone number.
- 5. Press the MEMORY button.
 - After programming, return the MEMORY switch to the "SET" position.

Flexible DSS Button (for KX-T30830)

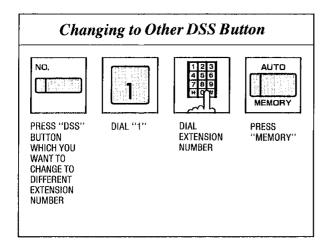


Description

Allows each DSS button to change to an extension number which is different from the default extension number.

Operation

Setting

- Be sure the handset is on the cradle and the SP-PHONE button is off.
- Set the MEMORY switch to "PROGRAM".
- 1. Press the DSS button which you want to change to a different extension number.
- 2. Dial (1).
- 3. Dial the new extension number (11 through 18).
- 4. Press the MEMORY button.
 - After programming, return the MEMORY switch to the "SET" position.

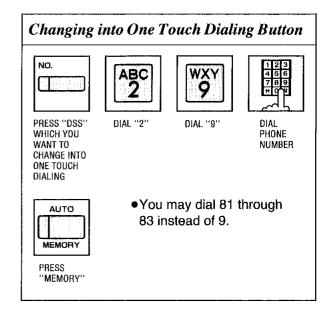

Description


Allows each DSS button to be used as a one touch dialing button. Up to 16 digits can be stored in each DSS button.

KX-T30830, KX-T7030 and KX-T7130 are available.

Operation

- •Be sure the handset is on the cradle and the SP-PHONE button is off.
- Set the MEMORY switch to "PROGRAM".
- 1. Press the DSS button which you want to use as a one touch dialing Memory location.
- 2. Dial (2).
- 3. Dial (9).
 - •You may dial 81 through 83 instead of 9 to select the desired trunk.
- 4. Dial the phone number.
- 5. Press the MEMORY button.
 - After programming, return the MEMORY switch to the "SET" position.

Flexible MESSAGE (Message Waiting) Button (for KX-T7020, KX-T7030, KX-T7050, KX-T7130)

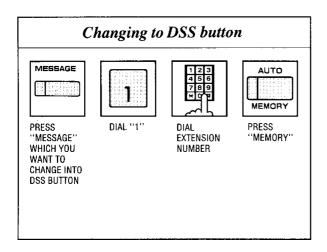


Description

Allows the MESSAGE button to change to a DSS (Direct Station Selection) button.

Operation

Setting

- Be sure the handset is on the cradle and the SP-PHONE button is off.
- •Set the MEMORY switch of the proprietary telephone to "PROGRAM".
- 1. Press the MESSAGE button to change to a DSS button.
- 2. Dial (1).
- **3.** Dial the new extension number (11 through 18).
- 4. Press the MEMORY button.
 - After programming, return the MEMORY switch to the "SET" position.

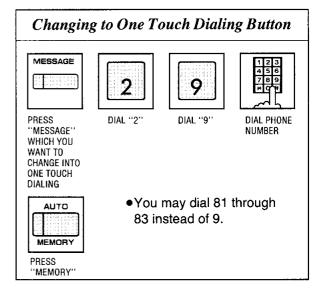

Description

Allows the MESSAGE button to change to a one touch dialing memory location. Up to 16 digits can be stored into the MESSAGE button.

Operation


- Be sure the handset is on the cradle and the SP-PHONE button is off.
- Set the MEMORY switch of the proprietary telephone to "PROGRAM".
- 1. Press the MESSAGE button to change to a one touch dialing button.
- 2. Dial (2).
- 3. Dial (9).
 - You may dial 81 through 83 instead of 9 to select the desired trunk.
- 4. Dial the phone number.
- 5. Press the MEMORY button.
 - After programming, return the MEMORY switch to the "SET" position.

Auto CO Hunting

Setting



LIFT HANDSET OR PRESS "SP-PHONE"

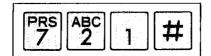

DIAL "721#"




HANG UP OR PRESS "SP-PHONE"

To cancel



PRESS "ICM"

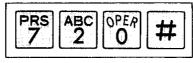

DIAL "720#"



PRESS
"SP-PHONE"

Dialing through CO line



LIFT HANDSET OR PRESS "SP-PHONE"



WAIT FOR THE CO. DIAL TONE



DIAL PHONE

Description

Can access any CO line which is not in use directly by picking up the handset or the SP-phone button. It can also tell an extension user which line is accessing by lighting the CO line indicator.

Operation

Setting

- 1. Lift the handset or press the SP-PHONE button.
- 2. Dial (721#).

 Wait for confirmation tone.

 "AUTO CO HUNT ON" will be displayed.
- 3. Press the SP-PHONE button.

To cancel

- 1. Press the INTERCOM button.
- 2. Dial (720#).
 Wait for confirmation tone.
 "AUTO CO HUNT OFF" will be displayed.
- 3. Hang up or press the SP-PHONE button.

Dialing through CO line

- 1. Lift the handset or press the SP-PHONE button. Dial tone from CO will be heard.
- 2. Dial the phone number.

Note:

To operate features after setting "Auto CO Hunting", press the ICM button instead of lifting the handset at step 1 in the procedure described in the Installation Manual or this manual and then proceed to step 2.

The reason to press the ICM button instead of lifting the handset is because lifting the handset causes the line to be connected to a CO line.

Executive Override

To barge in:





LIFT HANDSET OR PRESS "SP-PHONE"

PRESS "CO WHOSE INDICATOR

Description

Allows an extension user to barge in an engaged conversation for the following reasons: To establish Conference mode or to receive calls that another extension has answered.

Operation

- To Establish the Conference Mode.
- 1. Lift the handset or press the SP-PHONE.
- 2. Press the CO button whose indicator is red.

 A 3 party conference is now established and you can barge in the conversation. "CONF" will be displayed.
- 3. Start talking.
- **4.** Place the handset back on-hook or press the SP-PHONE button.

The other two parties will be directly connected together and can converse with each other.

- Call Transfer using "Executive Override".
- 1. Press the CO button.
 You have barged in the conversation.
- The Call Transfer will be completed when the extension user who received the call hangs up.

Conditions

- The Camp-on feature by pressing the CO button allows you to bargin in the conversation, when "Executive Override" is on at your extension. However, by dialing the busy CO line number you can use the Camp-on feature without barging in the conversation.
- 1. Dial the busy CO line number (81 through 83) whose indicator is red instead of pressing the CO button.
- 2. Dial (6).
- 3. Hang up or press the SP-PHONE button. You will be automatically called back when the CO line becomes free.
- Only one party can barge in a conversation.
- •You can not barge in the extension which is in dialing.

Electronic Station Lock

To lock



LIFT HANDSET OR PRESS "SP-PHONE"



DIAL "6"



DIAL LOCK CODE (000 through 999)



DIAL LOCK CODE AGAIN



DIAL "#"



HANG UP OR PRESS "SP-PHONE"

To unlock



LIFT HANDSET OR PRESS "SP-PHONE"



DIAL "6"



DIAL LOCK CODE (000 through 999)



DIAL "#"



HANG UP OR PRESS "SP-PHONE"

Description

Locking an extension prohibits another user from dialing on an outside line until unlocked.

Operation

To lock

- 1. Lift the handset or press the SP-PHONE button.
- 2. Dial (6).
- 3. Dial the lock code. Lock code must be 3 digits (000 through 999).
- 4. Dial the same lock code again.
- 5. Dial (#).
 "ID CODE SET" will be displayed.
- 6. Hang up or press the SP-PHONE button.

To unlock

- 1. Lift the handset or press the SP-PHONE button.
- 2. Dial (6).
- 3. Dial the lock code.
- 4. Dial (#).
 "ID CODE RESET" will be displayed.
- 5. Hang up or press the SP-PHONE button.

Conditions

- When dialing to an outside line using a locked extension, reorder tone will be heard.
- •Lock code must be 3 numerical digits except forthe "#" and "\times" buttons.
- •If you use a standard telephone; To lock, dial (0) instead of (#) at step 5. To unlock, dial (0) instead of (#) at step 4.

Changed Features


System Speed Calling Entry

The number of speed calling entry is changed to 80 phone numbers each with up to 32 digits

One Touch Dialing

Storage for one touch dialing is changed from "Up to 32 digits" to "Up to 16 digits".

System Speed Calling—Class Assignment

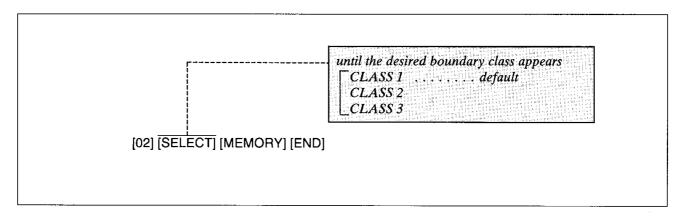

Description

You can select the boundary of service class which is free from the toll restriction of system speed calling.

Programming

- 1. Dial (02).
 "CLASS 1" will be displayed and blink.
- 2. Keep pressing the SELECT button until the desired class is displayed.
- 3. Press the MEMORY button.
- **4.** To return to the initial program mode, press the END button.

Conditions

If you set boundaries to CLASS 2, the system will allow system speed dialing on service class 1 and class 2, but restrict on service class 3 according to the toll restriction checking.

			m Speed D ry Class As	
		class 1	class 2	class 3
Service	1	A	A	A
class	2	T	A	A
	3	T	T	A

A: Allowed

T: Toll Restriction check


Programming Table

Toll Restriction—Class Assignment

The selective use of this feature permits restricted dialing to specific stations. A class of service can be assigned to a particular station which prohibits or limits that station's dialing ability.

The followings are the available 3 classes of service.

- 1. Service class 1 will allow all calls.
- 2. Service class 2 will deny 10 codes programmed as a denied code (location 00~09) except 20 codes programmed as an exceptional code (location 00~19).
- 3. Service class 3 will deny 20 codes programmed as a denied code (location 00~19) except 10 codes programmed as an exceptional code (location 00~09).

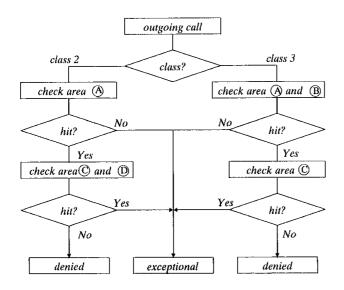

Denied Code Assignment

Code Dial Number

00

09

10

19

Exceptional Code Assignment

Code Dial Number

00

09

10

19

The following should be set.

- "Toll Restriction—Class Assignment" on page 24.
- "Toll Restriction—Denied Code Assignment" on page 25.
- "Toll Restriction—Exceptional Code Assignment" on page 26.
- "System Speed Calling—Class Assignment" on page 22.

Example:

< Application >

Service Class	Denied Dial Number	Exceptional Dial Number
2	011**** 1****	1800*** 1201***
3	001*** 0**** 1****	1800×××

< Programming >

03 04

19

 Denied Code Assignment

 CODE
 ENTRY DIAL NO.

 00
 011****

 01
 1*****


 02
 02

06		
07		
08		
09		
10	0****	
11		
12		
13		_
14		
15		
16		
17		
18	T	

Exceptional Code Assignment CODE ENTRY DIAL NO. 00 1800***

CODE	ENTRY DIAL NO.
00	1800+++
01	
02	
03	
04	
05	
06	
07	
08	
09	
10	1201×××
11	
12	
13	
14	
15	. ,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,
16	
17	
18	
19	

Toll Restriction—Class Assignment (cont.)

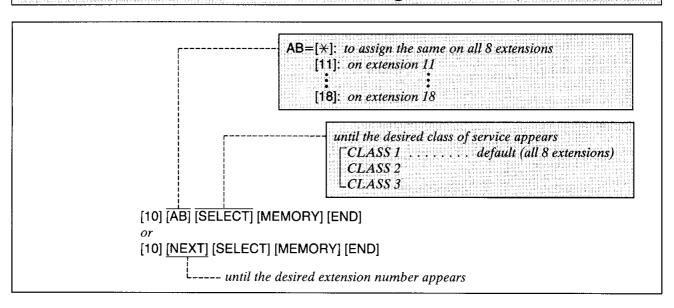

Description

Toll restriction can help eliminate telephone abuse and contribute to control telephone cost. There are three class of service available for each extension.

Programming


- 1. Dial (10). "ENTER EXTNO." will be displayed.
- 2. Press the NEXT button.
 "11: CLASS 1" will be displayed and "1" will blink.
- **3.** Keep pressing the SELECT button until the desired class is displayed.
- 4. Press the MEMORY button.
- **5.** Repeat steps 2 to 4, to program the assignment on the other extensions.
- **6.** To return to the initial program mode, press the END button.

Conditions

- When you start the programming from step 1, you may dial the desired extension number instead of NEXT button at step 2.
- The PREV button allows you to go to the previous extension for displaying the service class assignment.

Programming Table

Toll Restriction—Denied Code Assignment

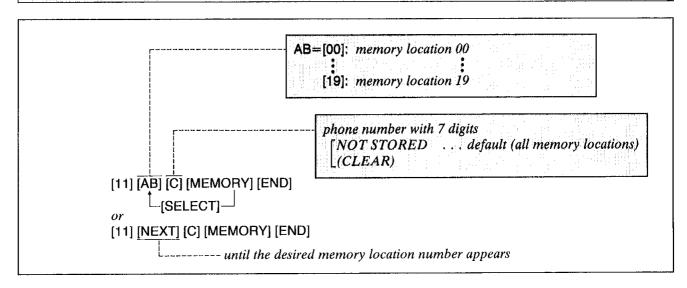

Description

For Service Class 2 or 3 (see "Toll Restriction") up to 10 or 20 phone numbers can be selected for use in toll dialing.

Phone numbers programmed will be denied. All extensions programmed for Service Class Selections shall be assigned to the same denied code assignment plan.

●Memory locations 00~09 are restricted by classes 2 and 3.

Memory locations 10~19 are restricted by only class 3.

Programming

1. Dial (11).
"ENTER CODE NO." will be displayed.

2. Dial the memory location number (00 through 19) or press the NEXT button.

Example:

When dial (00) or press the NEXT button;

- --When nothing is stored in memory location number "00", "00:NOT STORED" is displayed.
- —When the dial number $1 \times \times \times \times \times$ has beenstored, "00: $1 \times \times \times \times \times$ " will be displayed.
- 3. Dial the 7-digit phone number.
 - To erase a wrong enter, press the CLEAR button.
- 4. Press the MEMORY button.
 - The MEMORY indicator will be lit.

5. To advance to the next memory location number, press the NEXT button.

To return to the previous memory location

number, press the PREV button.

To go to the desired memory location number, press the SELECT button and dial the memory location number.

- 6. Repeat steps 3 to 5.
- 7. To return to the initial programming mode, press the END button.

Conditions

- Each phone number should consist of 7 digits.
- •"*\times" substitutes for any numbers, see the following example.

Example:

To deny extension 14 to have access to the phone number 09 and 8 in the service class 2.

Step 1...[10] [14] [SELECT] [MEMORY] [END]


Step 2...[11] [NEXT] [09*****] [MEMORY] [NEXT] [8*****] [MEMORY] [END]

09***...disables the phone numbers which starts with 09.

8****...disables the phone numbers which has 8 on the first digits.

Programming Table

Toll Restriction—Exceptional Code Assignment

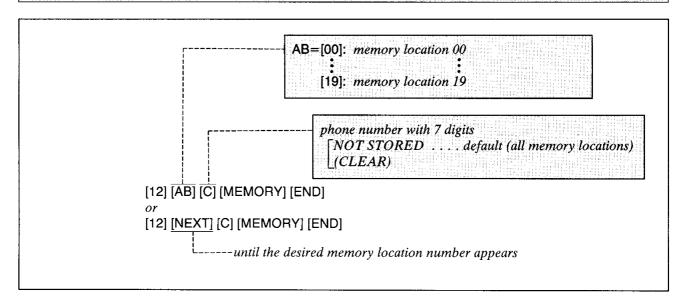

Description

Through programming, the desired extensions will be allowed to dial the phone numbers which are restricted by "Denied Code Assignment". For service Class 2 or 3, up to 10 or 20 phone numbers

- Memory locations 00~09 are not restricted by classes 2 and 3.
 Mamory locations 10-10 are not restricted
- Memory locations $10\sim19$ are not restricted only by class 2.

Programming

- 1. Dial (12).
 "ENTER CODE NO." will be displayed.
- 2. Dial the memory location number (00 through 19) or press the NEXT button.
- 3. Dial the 7-digit phone number.
 - To erase a wrong enter, press the CLEAR button.
- 4. Press the MEMORY button.
 - The MEMORY button indicator will be lit.
- 5. To advance to the next memory location number, press the NEXT button.
 To go to a desired memory location number, press the SELECT button and dial the memory location number.


- 6. Repeat steps 3 to 5.
- 7. To return to the initial programming mode, press the END button.

Conditions

- Each phone number should consist of 7 digits.
- •"\times" substitutes for a number.

Programming Tables

Hold Recall Time Set

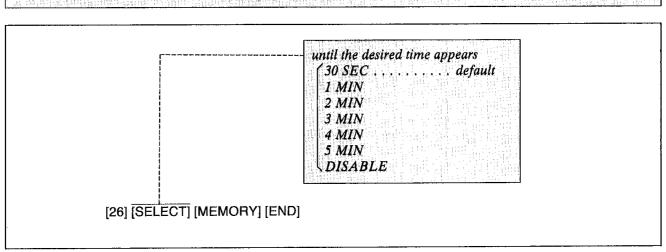

Description

This will inform you that you keep holding the line by ringing, after the time passes.

Programming

- 1. Dial (26).
 - "TIME: 30 SEC" will be displayed and "30 SEC" will blink.
- 2. Keep pressing the SELECT button until the desired time is displayed.
- 3. Press the MEMORY button.
- **4.** To return to the initial programming mode, press the END button.

Example:

2 minutes = [26] [SELECT] [SELECT] [MEMORY] [END]

Programming Table

until the desired mode appears [30] [SELECT] [MEMORY] [END]

Description

When a call is transferred to any extension, other extension did not receive the transferred call within 30 seconds, the call will return to you. This time may be changed to 2 minutes.

Programming

- 1. Dial (30).
 "30 SEC" will be displayed and blink.
- 2. Press the SELECT button to alternate between "30 SEC" and "2 MIN" to select the desired mode.
- 3. Press the MEMORY button.
- **4.** To return to the initial programming mode, press the END button.

Programming Table

Canceled Features

The listed features are canceled from KX-T30810B.

Pages of Installation Manual	Access Code	Title
2-7	02	CO Connection Assignment
2-18	11	Toll Restriction—Area Code Selection
2-19	12	Call Back Time
2-32	25	Hold Time Reminder

PROGRAMMING TABLE

TO SET	PROGRAM ADDRESS	STEPS RI	EQUIRED T	0	CH	4 N	GE	PI	<i>ROC</i>	GR.	AM
Date and Time	[00]	[A] [⇔] [SELECT] [⇔] [B] [L—year — month —		hour	· i,	⇒] [S minui	ELEC	CT] [N A	/ΙΕΜ(Μ/ <i>Ρ</i> λ	ORY] 1	[END
System Speed Calling Entry	[01] or [AUTO]	[AB] [CD] [phone number] [9]: aut [81] thr To advance to the next co [SELECT] [AB] [CD] [pho	omatic line access nu ough [83]: outside lii [79]: speed access cod de. one number] [MEMO	ne acc le	cess ni	umbe	r				
System Speed Calling —Class Assignment	[02]	[SELECT] [MEMORY] [EN		·s							
_		CLASS 1 CLASS 2 CLASS 3	Default ×		I	o mak	ce prog	ram c	hange		
Dial Mode (Tone/Pulse) Selection	[03]	[NEXT] [SELECT] [MEMC	PULSE								
		CO(s) Pulse mode Tone (DTMF) mode	Default all CO's ×		1	o mak	ke prog		hange	3	
Switching Mode (Day/Night Service)	[04]	[SELECT] [MEMORY] [EN	ID]								
		Manual Automatic	Default ×		7	o mal	ke proj	gram c	hange	<u>.</u> .	
Starting Time (Day/Time)	[05]	[A] [] [B] [] [SELECT] -minute	ay service (hour) Default		- start	ing ti	me fo	r nig		vice (
	i	Day plan Night plan	9:00 AM 5:00 PM								
Flexible Day Outward Dialing Assignment	[06]	[NEXT] [CE] [MEMORY CO nu Co nu	mber	ears							
		Extensions	Default all extensions	11	12	To ma: 13	ke pro. 14	gram e	change 16	17	18
		CO 1	×	-							
		CO 3	×						<u> </u>		
Flexible Night Outward Dialing Assignment	[07]	[NEXT] [CE] [MEMORY	mber	oears							
			Default	1_	7		_	¥——	chang		
		Extensions	all extensions	11	12	13	14	15	16	17	18
	1	CO 1	×	L	<u> </u>		1			└ ~─	
					1	1				l	
		CO 2 CO 3	×	ļ							

PROGRAMMING TABLE (cont.)

TO SET	PROGRAM ADDRESS		STEPS	REQ	QUI.	RED 1	O	CH	$A \Lambda$	GI	Į P.	RO	GR	AM	
Flexible Day Ringing	[08]	[NEX	KT] [CE] [MEMC	DRY] [E	ND]										
Assignment			L CC) numbe	er										
		ا ا	until the desir	ed exter	ision n	umber app	ears								
						Default						change			
			Extensions		all e	xtensions	11	12	13	14	15	16	17	18	
			CO 1			×						-			
			CO3			×		\vdash							
Flexible Night Ringing Assignment	[09]		(T] [CE] [MEMC L CC) numbe	er	umber app	ears								
					1)efault			To ma	ke pro	gram	change	8		
			Extensions		all e	xtensions	11	12	13	14	15	16	17	18	
			CO 1			×						<u> </u>			
			CO 2 CO 3			×				 		-		\vdash	
Toll Restriction—Class	[10]	[NE)	KT] [SELECT] [ME	MORY] [END			I		l .	<u> </u>	1 !			
Assignment		[until the desir		ision n		ears							 -1	
	1		Extansions			Default Stansians	11					change		70	
			Extensions Class 1		an e	xtensions ×	11	12	13	14	15	16	17	18	
			Class 2												
			Class 3												
Toll Restriction—Denied Codes Assignment	[11]		(T] [C] [MEMORY L phone nu until the desire	ımber w	ith 7 d		ber a _l	ppear	. 2						
					,		mory	locatio	on nur	nber					
				00)	01		02			03		04		
			n	05	5	06		07			08		09		
			Phone number entry	10)	11		12			13		14		
				15		16		17			18		19		
Toll Restriction— Exceptional Codes Assignment	[12]		I	mber w	ith 7 d	cation numi		pear.							.,.
				00		01	mory .	02	in nun		03		04		
								<u>.</u> .							
			Phone number	05		06	 	07			08	-	09		
			entry												
				10		11		12			13		14		
		·		15		16		17	+		18		19		

Total Andrews	PROGRAM ADDRESS	STEPS REQ	QUIRED 1	το :	СН	AΛ	/GE	i P	RO	GR	AM	
HOST PBX Access Codes Assignment	[13]	[NEXT] [AD] [MEMORY] [E	outside access co	odes e	ach n	vith a	maxi	mum	of 2 d	ligits		
		CO Outside access codes of the host PBX										
		1	Ĭ	13140 40			y me n	*03* 7 1	<u> </u>			
		2										
		3										
Automatic Answering (Automatic/Manual)	[14]	[NEXT] [SELECT] [MEMORY	VSWER/MAN A		ER							
Selection		until the desired extension number appears										
			Default			To ma	ike pro	gram	change	?		
		Extensions	all extensions	11	12	13	14	15	16	17	18	
		Automatic	×	-		-	 	ļ	-		\sqcup	
***************************************		Manual	<u></u>		<u> </u>	<u> </u>		<u> </u>	<u> </u>			4
Preferred Line Assignment	[15]	[NEXT] [SELECT] [MEMORY (non until the desired exter	e)/CO 1/CO 2/C									
	ļ .		Default	Τ		То та	ke pro	eram	change	<u> </u>		
		Extensions	all extensions	11	12	13	14	15	16	17	18	
		• • • • (none)	×		Ĺ							
		CO I					ļ	<u> </u>				
Programmable Call [10] Waiting		CO 2		1			ļ					
		CO 3		<u> </u>	L	L	<u> </u>	<u> </u>	L			
		LENABLE.	ision number app Default			1		7	change			
		Extensions	all extensions	11	12	13	14	15	16	17	18	
		Disable Enable	×	+			ļ		ļ			
Duration Time Count Start Mode	[17]	[SELECT] [MEMORY] [END]		AFTE			1	1	I			
			Default	+		To ma	ke pro	gram	change	·		
		Instantly 5S after dial	×	 								
		10S after dial	h 	†		-						
Hookswitch Flash Timing	[18]	[NEXT] [SELECT] [MEMORY L300 MS/60 until the desired exter	0 MX/900 MS	pears			•		·			
			Default			To ma			change			
		CO(s)	all CO's		1	_		2	\bot	3		
			· · · · · · · · · · · · · · · · · · ·			- 1			1		- 1	
		300 msec				-					\dashv	
		600 msec	×					•				
Disconnect Time	[19]] [END] 0 SEC									
Disconnect Time	[19]	600 msec 900 msec [NEXT] [SELECT] [MEMORY] [END] 0 SEC number appears			To ma	ıke nro	eram	change			
Disconnect Time	[19]	[NEXT] [SELECT] [MEMORY 1.5 SEC/4until the desired CO i	[] [END] 0 SEC number appears Default		1	То та		gram	change	3		
Disconnect Time	[19]	600 msec 900 msec [NEXT] [SELECT] [MEMORY] [END] 0 SEC number appears			Го та			change			

PROGRAMMING TABLE (cont.)

TO SET	PROGRAM ADDRESS	STEPS REQ	<i>QUIRE</i>	D T	Э СН	AN	GE	P	RO(ЗR	AM								
Calling Party Control (CPC) Signal	[20]	[NEXT] [SELECT] [MEMORY TONE CA	ALL/VOICI																
			Defaul	,		To mak	e progi	ram e	change										
		CO (s)	all CO	s	1		2			3									
		Enable	×																
		Disable																	
Intercom Alerting Mode	[21]	L TONE CA	[NEXT] [SELECT] [MEMORY] [END] TONE CALL/VOICE CALL until the desired extension number appears Default To make program change																
			Defaul	1															
		Extensions	all extensi	ons	11 12	13	14	15	16	17	18								
		Tone call	×			ļ ļ.													
		Voice call	<u> </u>	<u> </u>					LI.		<u></u>								
Programmable Doorphone	[22]	LD-PHON	NEXT] [SELECT] [MEMORY] [END] LD-PHONE 1, 2/1/2/••• (deny the ringing) Luntil the desired extension number appears																
			Defaul	't		To mak	e progi	ram (change										
	:	Extensions	all extensi	ons	11 12	13	14	15	16	17	18								
		Doorphone I	×			1													
		Doorphone 2	×																
		deny the ringing	<u> </u>	<u></u>					<u> </u>		lJ								
Dial Call Pickup Group Assignment	[23]	[NEXT] [SELECT] [MEMORY LPICKUPuntil the desired exter	G:1/2/1, 2/•	er appea	urs	oup) To mak	e progi	ram (change										
			Extensions	all extensi		11 12	13	14	15	16	17	18							
			Pickup Group 1	×															
									Pickup Group 2										
						out of the group	L			<u> </u>					LJ				
Busy Tone Selection	[24]	[SELECT] [MEMORY] [END] LTONE 1/2																	
			Defaul	1		To mak	e progi	ram (change										
		Tone I	×																
		Tone 2	<u> </u>																
Hold Recall Time Set	[26]	[SELECT] [MEMORY] [END] L30SEC/1 MIN/2 M		4 MIN/5	5 MIN/D	ISABI	Æ					•							
			30 sec- onds	1 min- ute	2 min- utes	3 min- utes	4 m		5 min utes	di	sable								
		Default					ļ												
		To make program change	L	<u> </u>	L	L													
Programmable External Paging Access Tone	[27]	[SELECT] [MEMORY] [END]																	
			Defaul	t															
		Enable	×																
		Disable	L																
DTMF Receiver Check	[28]	[NEXT][SELECT][MEMORY]	[END]																
		ENABLE/I	DISABLE	ppears															
			Defaul	,		To make	provi	am e	hanve										
							2												
	[.	Enable	×		1 2														

TO SET	PROGRAM ADDRESS	STEPS RE	QUIRED 1	0	CH	AΛ	IGI	7P	RO	GR	AN	Tananana Tananananan Tanananan	
Programmable Secret Auto Dial	[29]	[SELECT] [MEMORY] [END]											
			Default			To ma	ike pro	gram	change				
		No secret	×										
		Secret	<u> </u>										
Transfer Recall Time	[30]	[SELECT] [MEMORY] [END] L30 SEC/2 MIN					-						
			Default	<u> </u>	:	To ma	ike pro	gram	change				
		30 sec	×	-									
	ļ	2 min		<u> </u>									
Automatic Designated CO Line Access	[31]	[NEXT] [CE] [MEMORY] [E LCO number until the desired exter		ears									
			Default		:	To ma	ike pro	gram	change	•			
		Extensions	all extensions	11	12	13	14	15	16	17	18		
		CO 1	×										
		CO 2	×										
		CO 3	X										
Programmable Call Waiting Tone	[32]	[NEXT] [SELECT] [MEMORY LTONE 1/2 Luntil the desired external	TONE 2	ears									
			Default			To ma	ke pro	gram	change				
		Extensions	all extensions	11	12	13	14	15	16	17	18		
		Tone 1	×						l				
		Tone 2											
Programmable Executive Override	[33]	[NEXT] [SELECT] [MEMORY] [END] ENABLE/DISABLE until the desired extension number appears Default To make program change											
		Extensions	all extensions	11	12	13	14	25 15	16	17	18		
		Enable	un extensions	11	12	13	17	13	10	1/	10		
		Disable	×				1						
Standard Telephone Connection with Proprietary Telephone	[34]	[NEXT] [SELECT] [MEMORY ENABLE until the desired exter	/] [END] //DISABLE	ears		1						l .	
			Default		-	To ma	ke pro	eram	change				
		Extensions	all extensions	11						17	18		
		Enable		1			1			•			
		Disable	×										
F1/SAVE Selection (for KX-T30850, KX-T7020, KX-T7030, KX-T7050)	[35]	[NEXT] [SELECT] [MEMORY LFEATUR. Luntil the desired external	E KEY/SAVE KI nsion number app						 				
			Default					_	change				
		Extensions	all extensions	11	12	13	14	15	16	17	18		
		Feature Key	×	-	<u> </u>	L	ļ		\vdash				
		Save Key		<u> </u>	l	L	J						
Selectable Call-on-Hold Music Source	[36]	[SELECT] [MEMORY] [END]	ERNAL			To	.k	*****	cha				
		Internal	Default ×	+		i v ma	ne pro	grum	change				
		External		 									
	+												
Station Program Clear	[98]	[NEXT] [MEMORY] [END]											
System Clear	[99]	[NEXT] [MEMORY] [END]											